

# Catalina Nightstand Assembly

Unpack the nightstand onto a soft, level surface and identify the following components

Nightstand top (1) Legs (4) 3" Lag Bolts (4) Washers (4)

Tools required for assembly - 3/8" socket wrench. Study the instructions thoroughly.

Lay the nightstand top face down on a soft level surface. Hold one of the legs against the nightstand top with the predrilled holes in the leg facing the holes in the corner block. Slide a washer over a lag bolt, and then insert the lag bolt through the corner block and into the pre drilled hole in the leg. Use the wrench to tighten the lag bolt securely. Repeat this to attach the other legs. Set the nightstand into an upright position.

## Care Instruction

To care for and preserve the finish on your new Copeland Furniture piece, please keep the following recommendations in mind.

- While our furniture has been finished with a durable top coat, the surface may be sensitive to dents and abrasions during the first 30 days in your home.
- Treat the surface finish gently so it does not dent or chip. Tape or stickers should not be put on the finish.
- For general care use a soft cloth to dust the furniture.
- Use damp cloth with a mild soap to clean-up spills or dirt. Dry the surface thoroughly.
- Please do not use any polishes, waxes or solvents to clean the surface of the furniture. This holds true for new Copeland Furniture pieces as well as items you may already have in your home.
- Please do not place any candles directly on the surface of your furniture. The perfumes and dyes in the candles may penetrate the finish.

## Special Care Instructions for Cherry Furniture

Please read the following if you have purchased a Copeland product in cherry. Furniture that has been crafted from cherry wood becomes darker with age. The change in color, from a reddish tan to a reddish brown, is most noticeable during the first six months of ownership. It is important to understand that exposure to light accelerates, the natural oxidization process. An object left on a cherry wood surface for an extended period of time may retard the aging process in a limited area. Simply remove the object and, over time, the surface will attain a uniform reddish brown color.

