



Assembly Instructions for Essentials Tables

Please identify the listed items before installation

Hardware included:

- 1/4" – 20 x 15mm hex bolts (16, Kidney coffee table - 12)
- Allen wrench (1)

Components included:

- Hairpin legs or wood legs (4), Kidney coffee table (3)

Essentials Tables utilize different height hairpin legs (or wood legs) to match different sizes (shapes) of table tops. This instruction sheet uses a 24" x 48" x 24" end table to illustrate the installation steps.



For Round table instructions, please see page 2.



Tools required **Allen wrench**

Step 1: Install the table legs

Lean the table top on its back on a soft surface. Align the holes in each *leg plate* and the holes in the bottom of the *table top*. Use provided Allen wrench to tighten each leg with hex bolts (**Figure 1** and **Figure 1-1**).

Figure 1.
Install the hairpin legs



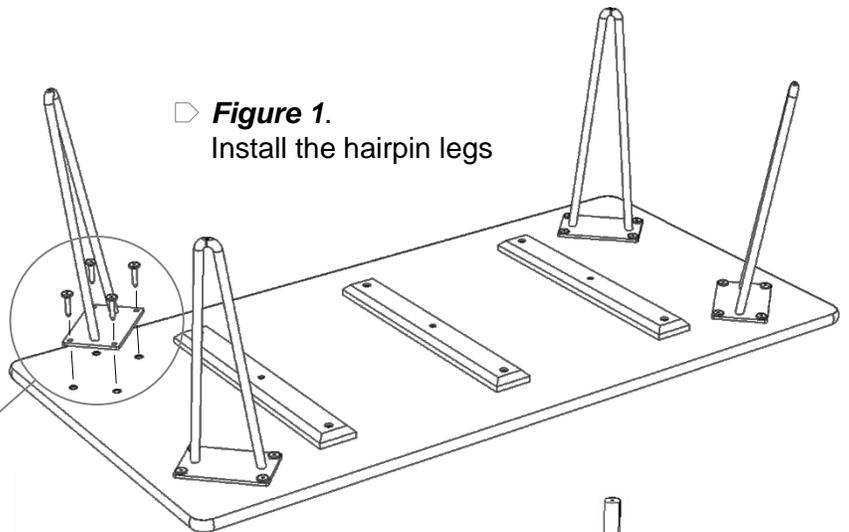


Figure 1-1.
Install the wood legs

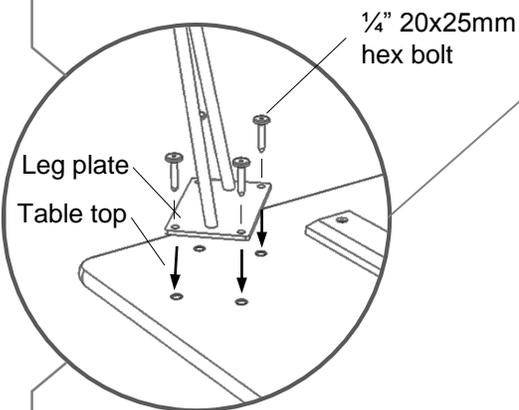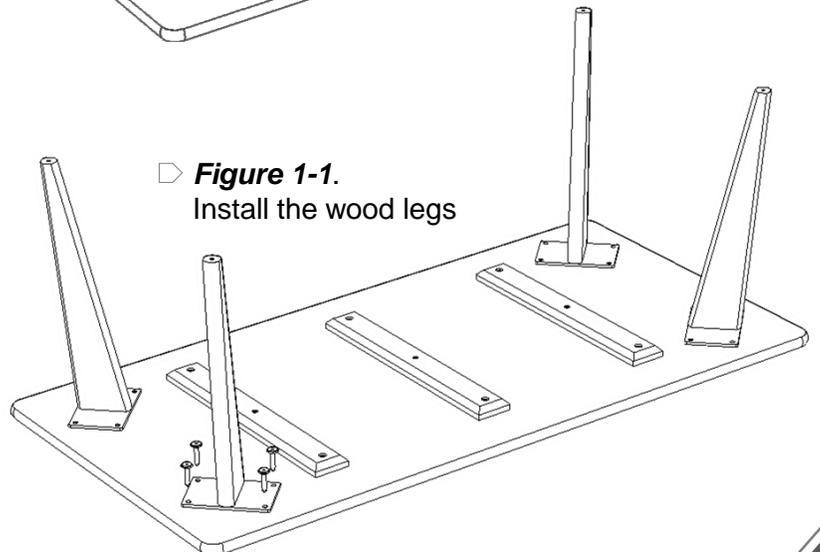

Step 2: Stand the table upright

Lift the table upright and gently set 4 legs on the floor.

Install legs for Round tables

Round Essentials tables have two sets of mount holes for each leg underneath the table top (**Figure 2**). The 28.25" hairpin legs (three rod style) utilize the inner four holes for the installation of each leg. The 17.25" hairpin legs utilize the outer four holes for the installation of each leg.

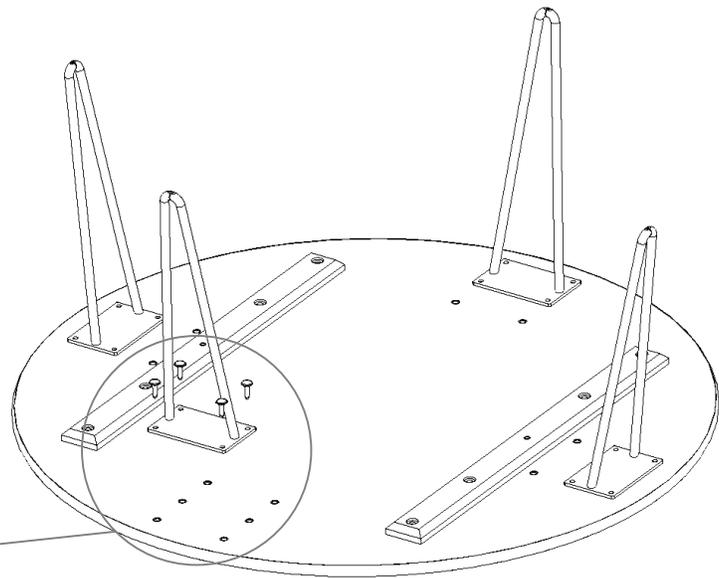
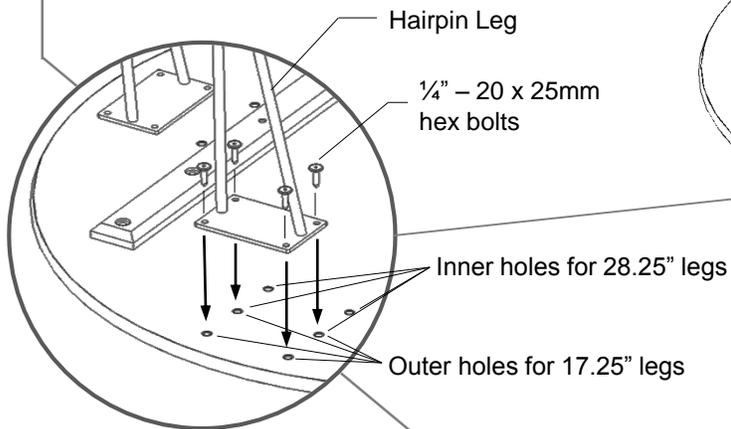


Figure 2. 18" Round Coffee Table

Care Instructions

To care for and preserve the finish on your new Copeland Furniture piece, please keep the following recommendations in mind.

- While our furniture has been finished with a durable top coat, the surface may be sensitive to dents and abrasions during the first 30 days in your home.
- Treat the surface finish gently so it does not dent or chip. Tape or stickers should not be put on the finish.
- For general care use a soft cloth to dust the furniture.
- Use damp cloth with a mild soap to clean-up spills or dirt. Dry the surface thoroughly.
- Please do not use any polishes, waxes or solvents to clean the surface of the furniture. This holds true for new Copeland Furniture pieces as well as items you may already have in your home.
- Please do not place any candles directly on the surface of your furniture. The perfumes and dyes in the candles may penetrate the finish.
- Beds must be disassembled before moving to avoid damage. Never attempt to move the bed while it is assembled.

Special Care Instructions for Cherry Furniture

Please read the following if you have purchased a Copeland product in cherry. Furniture that has been crafted from cherry wood becomes darker with age. The change in color, from a reddish tan to a reddish brown, is most noticeable during the first six months of ownership. It is important to understand that exposure to light accelerates the natural oxidization process. An object left on a cherry wood surface for an extended period of time may retard the aging process in a limited area. Simply remove the object and, over time, the surface will attain a uniform reddish brown color.