

# Instructions for Wall Mounted Two Door Media Cabinets



## Hardware included:

- Shelf Pins (8)
- 2.5" Lag Bolts (4)
- Washers (4)

## Components included:

- Shelves (2)
- French Cleat (1)
- Back Panels (2)


Tools required | Philips Head Screwdriver

### Initial setup | Removing the Shipping Block

Two Door Media Cabinets arrive fitted with a shipping block that immobilizes the doors to prevent damage during transit. This must be removed prior to operation.

#### Remove the Shipping Block

Locate the shipping block in the center compartment. (**Figure 1**). Remove screw with Philips head screwdriver, and slide block out to the side.

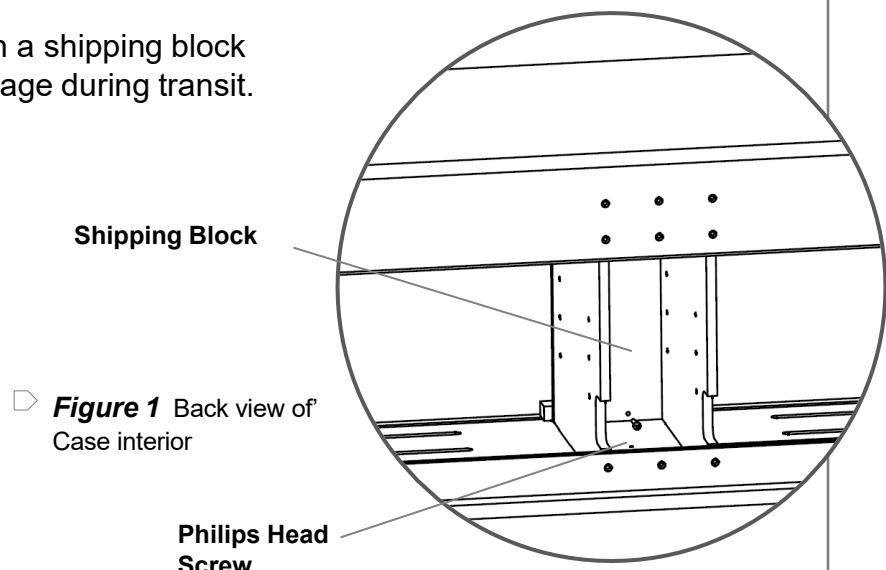


▷ **Figure 1** Back view of Case interior

**Cases feature removable back panels that provide better access to media components during normal use. Back panels must be inserted during initial setup**


To insert the back panels: **1**) slide top edge of panel all the way into in upper groove of rear case apron. **2**) Swing lower half of panel inward and **3**) insert bottom edge of panel into lower groove. (**Figure 2**).

To remove panels, reverse the steps described above.

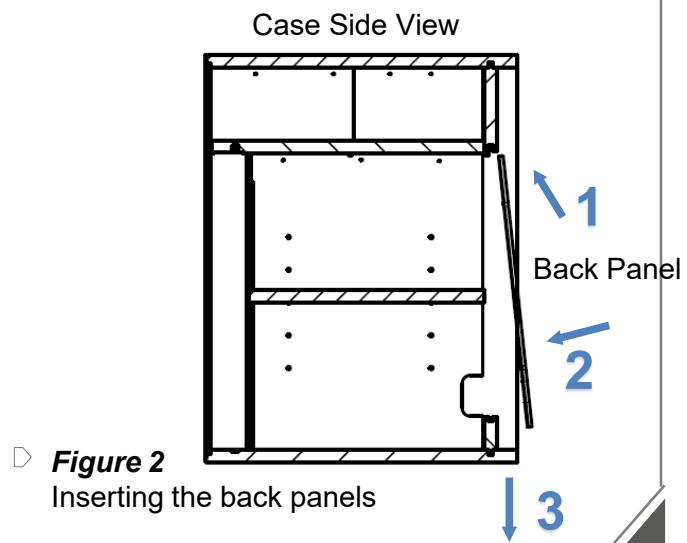

▷ **Figure 2**  
Inserting the back panels

## Mounting the Cabinet

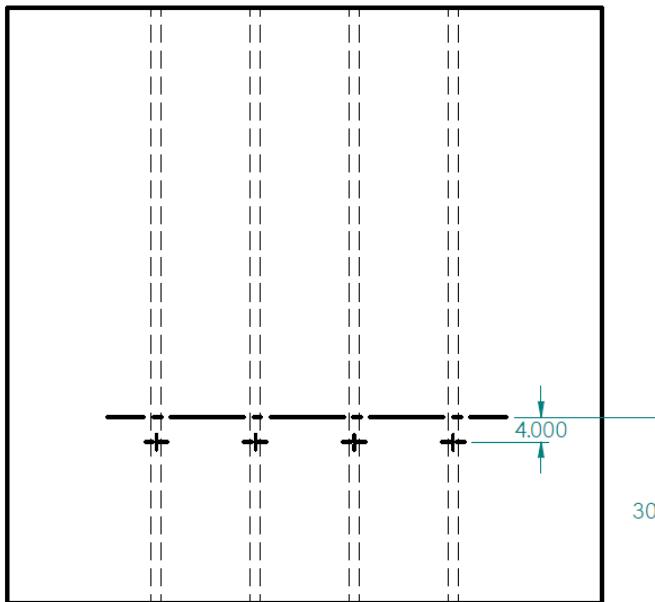

Wall Mounted cases are hung on a "French Cleat" (provided). Use a stud finder to locate studs. Select studs nearest to the center of the desired cabinet location. Cabinet can move a total of 14" side-to side on the cleat after mounted.

Mark wall on center of studs, 4" below desired cabinet height. (**Figure 1**).

The Cleat is bored for 16" or 24" stud spacing. Use a level to assure mounting holes are in alignment.




### Caution:

It is critical that the cleat is screwed into studs. Do not use drywall anchors.

▷ **Figure 1.**  
Mark Hole Locations

**Attach the French Cleat**  
Drill studs with 3/16" drill bit at least 2" into wall.


Attach lag bolts with washers, using level to ensure cleat stays horizontal.

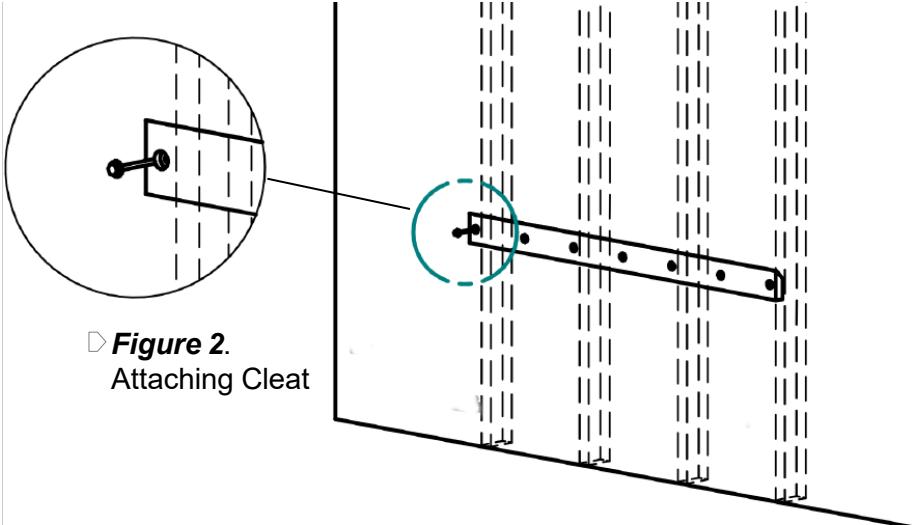

▷ **Figure 2.**  
Attaching Cleat

## Hang the Cabinet

Lift the cabinet and hang over the cleat. Slide the cabinet side to side to center.

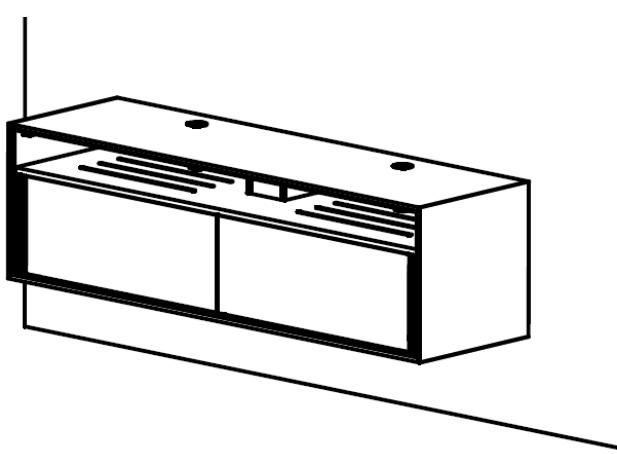

## Insert Shelves




After hanging the cabinet, slide one door to the open position. Insert Shelf Pins in the desired height. Shelves are notched on the underside. Slide shelves into cabinet until notches lock in place with the pins. Repeat process on opposite side. (**Figure 1**).

Adjustable Shelf

▷ **Figure 1.**  
Inserting Shelves

## Leveling the Cabinet


Any twisting of the cabinet due to uneven surfaces can result in misalignment of door. If doors are misaligned when closed, lift cabinet off wall, adjust rear leveler and rehang to bring cabinet to square. (**Figure 2**).

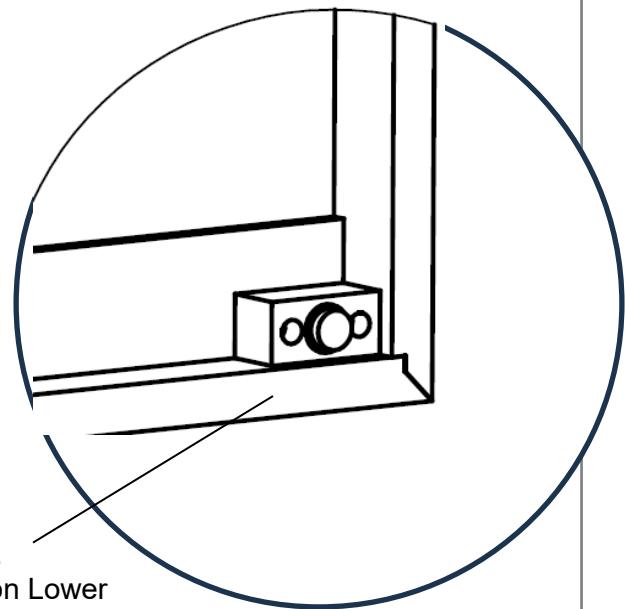

▷ **Figure 2.**  
Leveler on Lower  
Back Side of Cabinet

## Removing Sliding Doors

If doors need to be removed for any reason, slide one door partially open. Lift closed door until it's free of the lower groove, swing outward and pull door free of upper groove. Repeat process on opposite door. To replace doors, reverse the steps described above. (**Figure 3**).

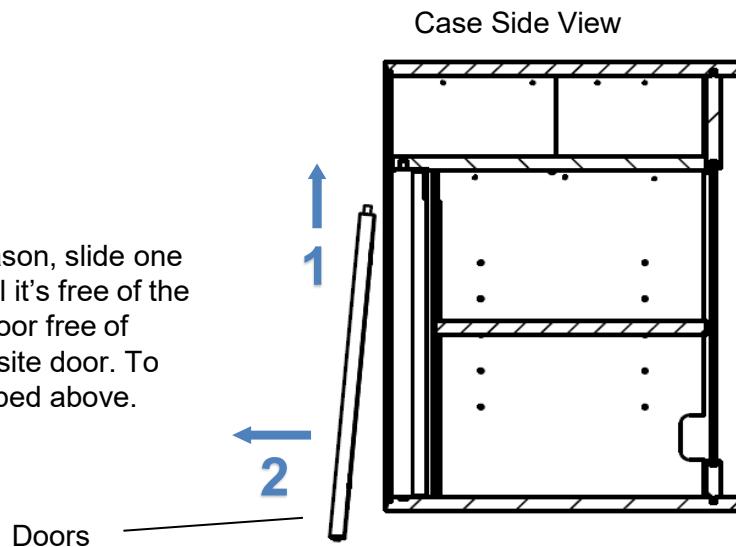

▷ **Figure 3.**  
Removing the doors



## Important note

Maximum Load Capacity – 300LBS

## Care Instructions

To care for and preserve the finish on your new Copeland Furniture piece, please keep the following recommendations in mind.

- While our furniture has been finished with a durable top coat, the surface may be sensitive to dents and abrasions during the first 30 days in your home.
- Treat the surface finish gently so it does not dent or chip. Tape or stickers should not be put on the finish.
- For general care use a soft cloth to dust the furniture.
- Use damp cloth with a mild soap to clean-up spills or dirt. Dry the surface thoroughly.
- Please do not use any polishes, waxes or solvents to clean the surface of the furniture. This holds true for new Copeland Furniture pieces as well as items you may already have in your home.
- Please do not place any candles directly on the surface of your furniture. The perfumes and dyes in the candles may penetrate the finish.
- Beds must be disassembled before moving to avoid damage. Never attempt to move the bed while it is assembled.

### Special Care Instructions for Cherry Furniture

*Please read the following if you have purchased a Copeland product in cherry.* Furniture that has been crafted from cherry wood becomes darker with age. The change in color, from a reddish tan to a reddish brown, is most noticeable during the first six months of ownership. It is important to understand that exposure to light accelerates the natural oxidization process. An object left on a cherry wood surface for an extended period of time may retard the aging process in a limited area. Simply remove the object and, over time, the surface will attain a uniform reddish brown color.

