

Instructions for Wall Mounted Four Door Storage Consoles



Hardware included:

- Shelf Pins (8)
- 2.5" Lag Bolts (4)
- Washers (4)

Components included:

- Shelves (2)
- French Cleat (1)
- Back Panels (2)

Tools required

Philips Head Screwdriver

Initial setup


Insert Back Panels

Cases feature removable back panels that provide better access to media components during normal use. Back panels must be inserted during initial setup

To insert the back panels:
1) slide top edge of panel all the way into in upper groove of rear case apron.
2) Swing lower half of panel inward and **3**) insert bottom edge of panel into lower groove. (**Figure 1**).


To remove the panels, reverse the steps as described above.

Case Side View

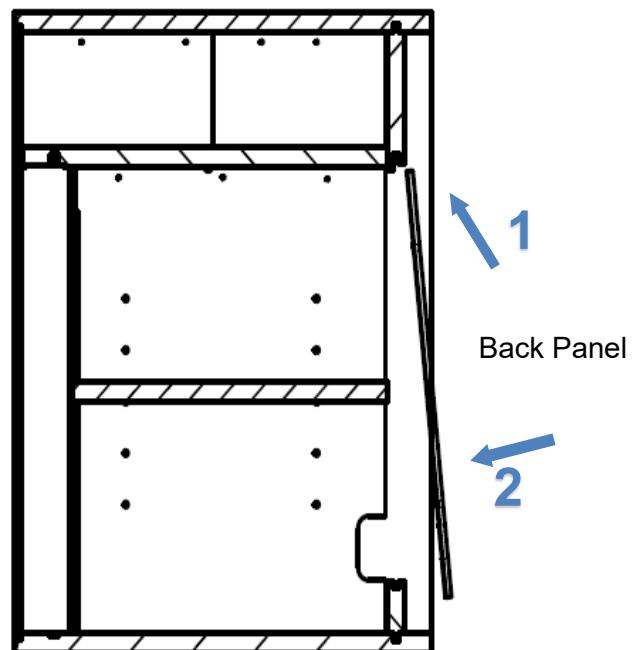

▷ **Figure 1**
Inserting the back panels

Mounting the Cabinet

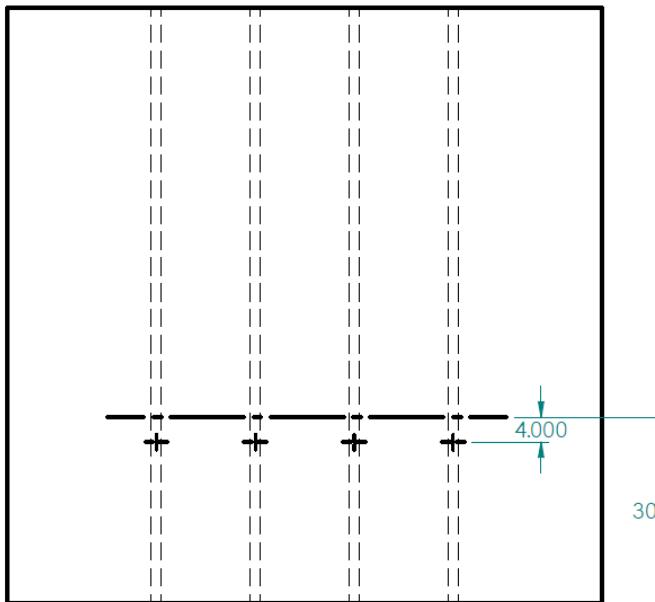

Wall Mounted cases are hung on a "French Cleat" (provided). Use a stud finder to locate studs. Select studs nearest to the center of the desired cabinet location. Cabinet can move a total of 14" side-to side on the cleat after mounted.

Mark wall on center of studs, 4" below desired cabinet height. (**Figure 1**).

The Cleat is bored for 16" or 24" stud spacing. Use a level to assure mounting holes are in alignment.




Caution:

It is critical that the cleat is screwed into studs. Do not use drywall anchors.

▷ **Figure 1.**
Mark Hole Locations

Attach the French Cleat
Drill studs with 3/16" drill bit at least 2" into wall.


Attach lag bolts with washers, using level to ensure cleat stays horizontal.

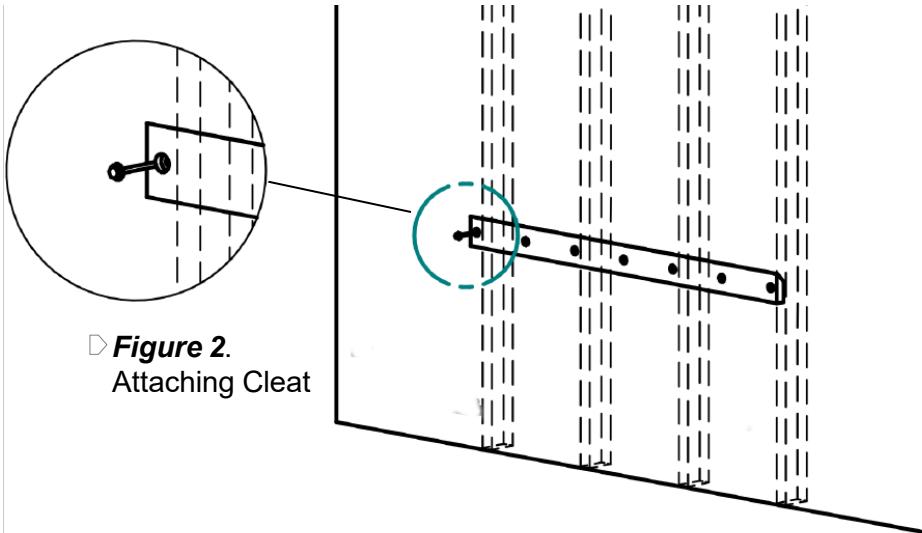

▷ **Figure 2.**
Attaching Cleat

Hang the Cabinet

Lift the cabinet and hang over the cleat. Slide the cabinet side to side to center.

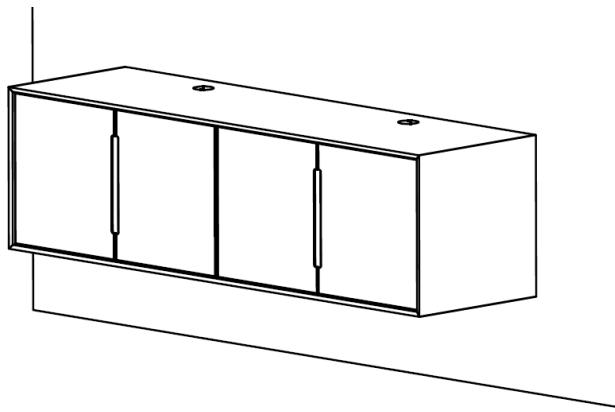


Insert Shelves



▷ **Figure 1.**
Inserting Shelves

Open doors, insert Shelf Pins in the desired height. Shelves are notched on the underside. Slide shelves into cabinet until notches lock in place with the pins. (**Figure 1**). Repeat process on opposite side.

Adjustable Shelf

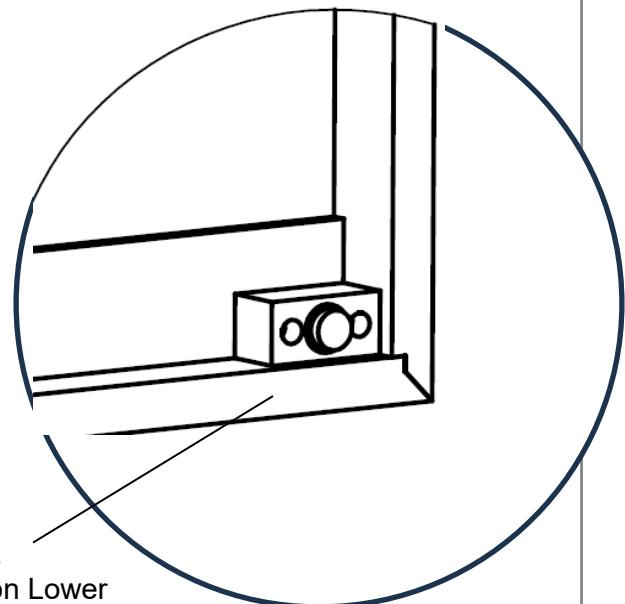


▷ **Figure 2.**
Leveler on Lower
Back Side of Cabinet

Tools required | Philips head screwdriver

How to level doors

If the step above fail to correct misalignment, there are three screws on each hinge assembly and each can be adjusted independently (**Figure 3**). The first screw can adjust the door in the left and right direction. The second screw can adjust the door up and down. The third screw can move the door in and out. Please adjust your door accordingly.

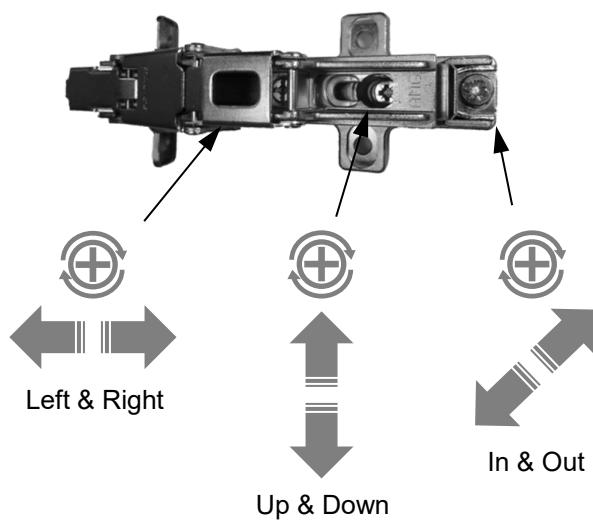

▷ **Figure 3.** Adjust the door(s) by turning the screws on the hinge.



Important note

Maximum Load Capacity – 300LBS

Care Instructions

To care for and preserve the finish on your new Copeland Furniture piece, please keep the following recommendations in mind.

- While our furniture has been finished with a durable top coat, the surface may be sensitive to dents and abrasions during the first 30 days in your home.
- Treat the surface finish gently so it does not dent or chip. Tape or stickers should not be put on the finish.
- For general care use a soft cloth to dust the furniture.
- Use damp cloth with a mild soap to clean-up spills or dirt. Dry the surface thoroughly.
- Please do not use any polishes, waxes or solvents to clean the surface of the furniture. This holds true for new Copeland Furniture pieces as well as items you may already have in your home.
- Please do not place any candles directly on the surface of your furniture. The perfumes and dyes in the candles may penetrate the finish.
- Beds must be disassembled before moving to avoid damage. Never attempt to move the bed while it is assembled.

Special Care Instructions for Cherry Furniture

Please read the following if you have purchased a Copeland product in cherry. Furniture that has been crafted from cherry wood becomes darker with age. The change in color, from a reddish tan to a reddish brown, is most noticeable during the first six months of ownership. It is important to understand that exposure to light accelerates the natural oxidization process. An object left on a cherry wood surface for an extended period of time may retard the aging process in a limited area. Simply remove the object and, over time, the surface will attain a uniform reddish brown color.



If you have any questions or difficulties, please call us at the number below between the hours of 8:00 am and 4:30 pm eastern time.
156 Industrial Drive, Bradford, VT 05033 Tel: 802.222.9282 Fax: 802.222.9285 www.copelandfurniture.com